


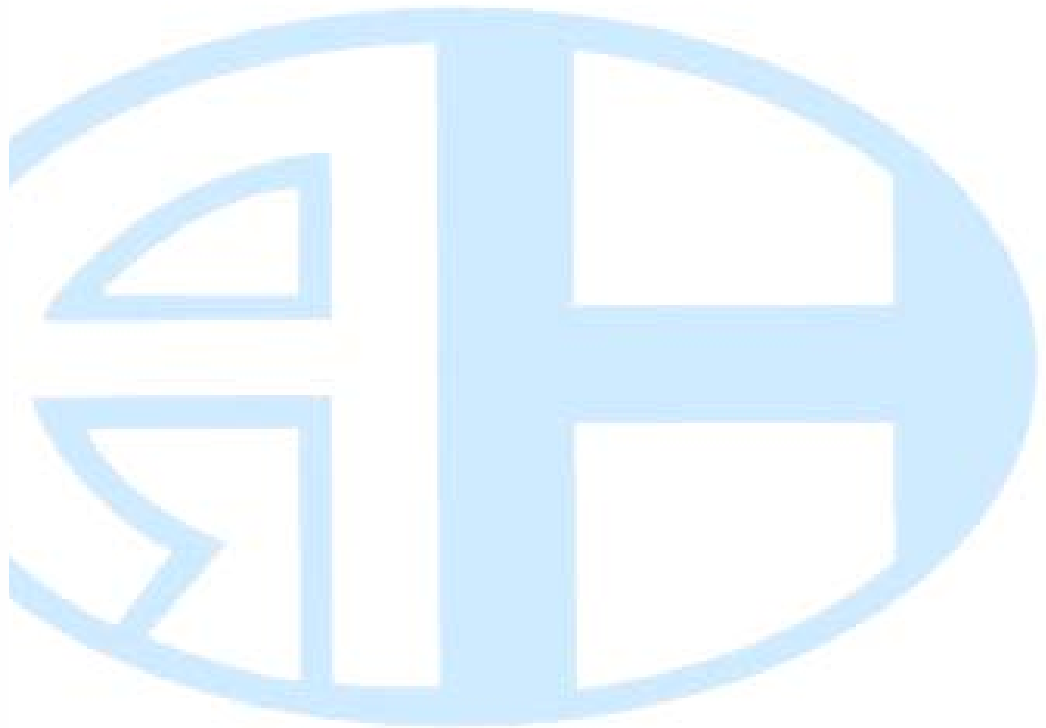

CyberView User Manual

RK1




1U Rackmount Keyboard drawer

Version 1.0

20 March 2004

Table of Contents

1.0	General.....	3
1.1	Unit Introduction.....	3
1.2	Unit Photograph.....	3
1.3	Unit Features.....	3
1.4	Unit Packing Contents.....	3
1.5	Important Information & Safeguards.....	3
1.6	Preparation for Use.....	3
2.	Warranty.....	5
2.1	Period & Conditions.....	5
2.2	Manufacturers exclusions.....	5
3.	Disclaimer.....	5

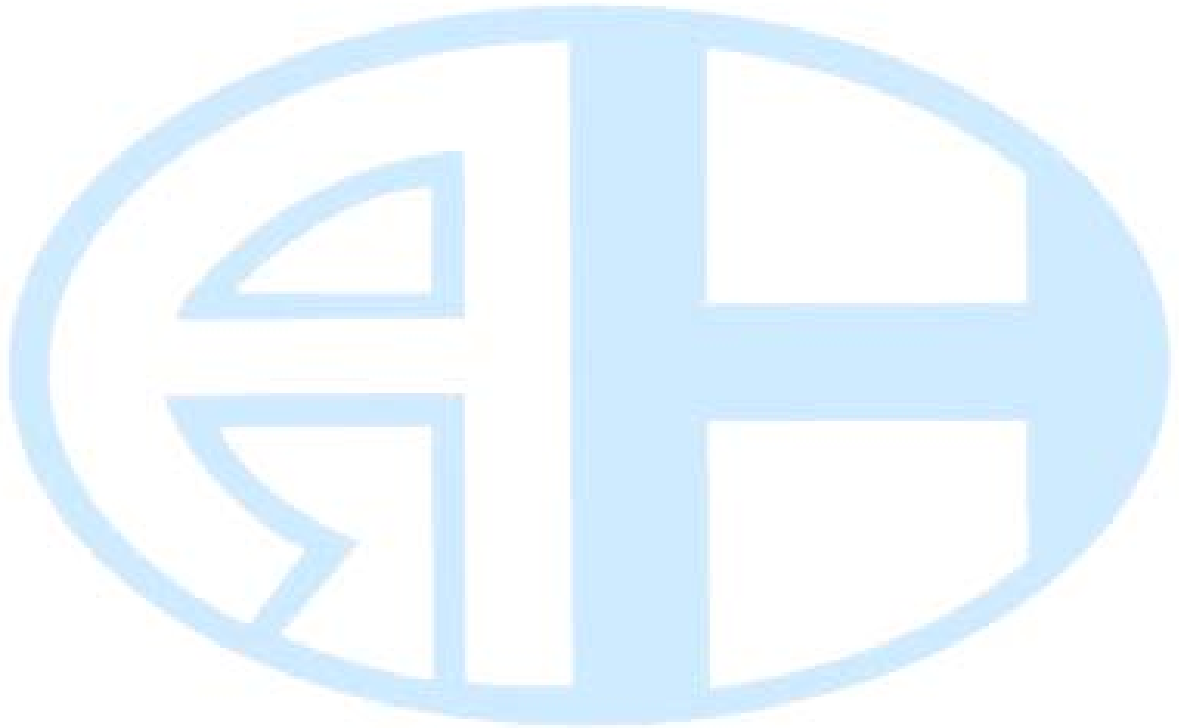

1.0 General

1.1 Unit Introduction

Thank you for purchasing the 1U Rackmount keyboard drawer. The unit offers space saving leading edge, flexible features.

1.2 Unit Photograph



1.3 Unit Features

- Lockable Unit for increased access security
- Flexible keyboard selections, notebook type with touch pad mouse or Cherry type with trackball mouse, available in multiple languages
- Keyboard slide rails have friction stop positions to prevent accidental movement

1.4 Unit Packing Contents

Model Number	RK1
RK1 1U Keyboard Drawer	1
User Manual CD	1
Rack Mount Kit	1


1.5 Important Information & Safeguards

- Please read these safety instructions carefully
- Keep this user manual for later reference
- Disconnect the unit from the mains input power supply source before cleaning
- Do not spray aerosol or liquid cleaners directly on the unit, use only a soft cloth for cleaning
- Rest the unit on a reliable surface when installing, a drop or fall may cause injury
- Please note all cautions and warnings on the equipment
- Never open the unit. Only qualified personnel should open the unit

1.6 Preparation for Use

- Carefully remove the unit from its packaging

- Please check that the unit and its accessories match the packing contents in section [1.4](#) of this user manual
- Please read this user manual thoroughly familiarising yourself with the unit
- Place the unit on a protected work surface and carefully slide open the keyboard drawer noting the friction stops on the slides to prevent movement of the keyboard whilst in use
- After connecting the unit you should now be able to see the LED lights on the unit functioning
- Carefully install the unit into the rack, noting section [1.5](#) of this user manual - important information and safe guards, and plug in all connecting hardware (ensure all connecting hardware is powered down for this stage of the install)

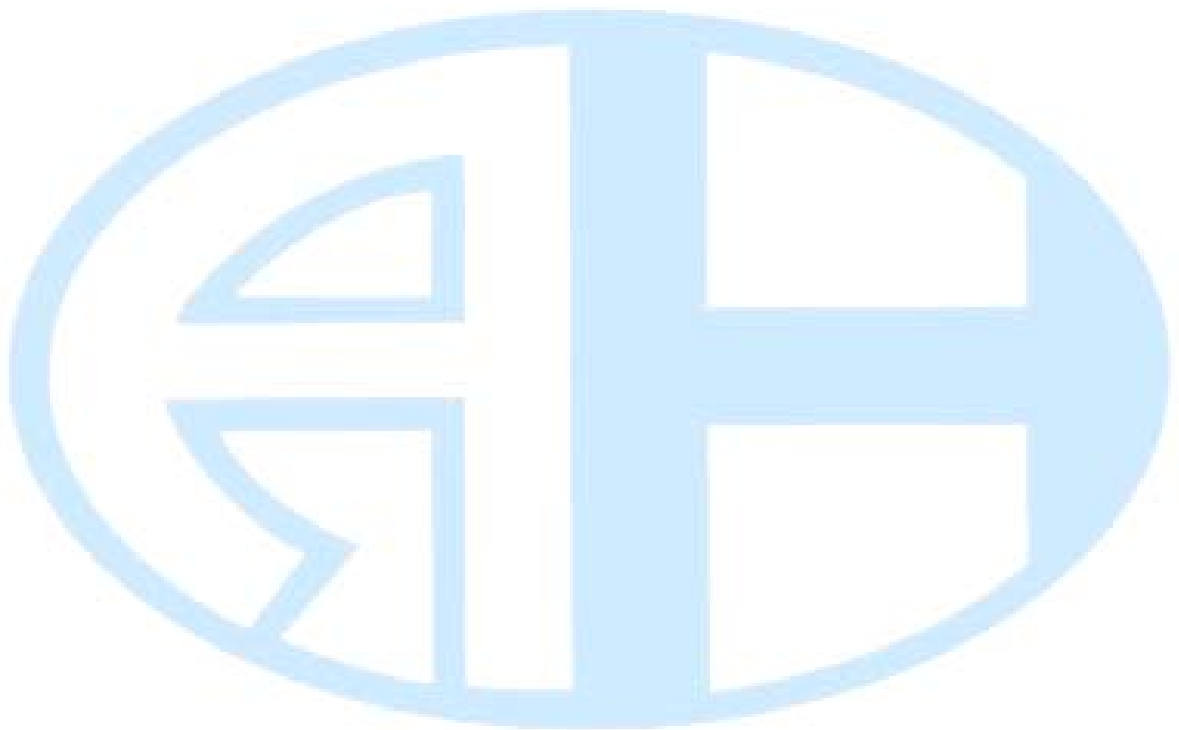

2. Warranty

2.1 Period & Conditions

Warranty is from the date of sale of the unit, subject to the terms and conditions of the Austin Hughes Europe Authorised channel partner who supplied the unit, please refer to your authorised channel partner for terms & conditions

2.2 Manufacturers exclusions

2.2.1 Any Unit on which the Austin Hughes serial number has been defaced, modified or removed

2.2.2 Damage, deterioration, or malfunction resulting from – accident, misuse, neglect, fire, water, lightening, or other acts of nature

2.2.3 Unauthorised unit modification

2.2.4 Unauthorised unit repair, by other than an Austin Hughes Europe authorised channel partner

2.2.5 Damage to the unit caused by installation or removal, unless covered by Austin Hughes Europe channel partner services warranty

2.2.6 Use of unauthorised parts not meeting Austin Hughes Europe specifications

2.2.7 Other causes of damage unrelated to product defect including wear and tear

2.2.8 Damage to the unit caused by transit

3. Disclaimer

This information is subject to change without notice. Austin Hughes Europe accept no responsibility for damage or claims, resulting from misuse or misinterpretation of this information