



DAXTEN[®]

*THE BRAINS BEHIND
KVM SWITCHING & SHARING*

Voyager 100 USB

Installation guide



Specifications

Package Contents:

- 1 x Voyager 100 USB Local Unit
- 1 x Voyager 100 USB Remote Unit
- 1 x PC KVM Cable 1.0 m
- 1 x Regulated Power Adaptor

Optional Items:

- 1034-00C 19" Rack Mount Kit for Local or Remote Unit
- 9014-00A Local Unit Regulated Power Adaptor

Specifications:

Video Bandwidth (-3dB)	Local Unit: 150 MHz Remote Unit: 200 MHz
Maximum Resolution	1600 x 1200 @ 85 Hz
Video I/O	1.0V P-P
Video Compatibility	VGA, SVGA, XGA
Video Compensation	4 Stages in 4 Ranges
Video Coupling	DC
Sync H/V	Separated TTL Level
Console Switch Time	< 1 second
Input Power	Local Unit: From PC, or via optional 5V DC 500mA Regulated PSU. Remote Unit: 5V DC 500mA Regulated PSU. Running > 130mA
Interconnect Cable	CAT 5, CAT 5E & CAT 6, Solid UTP/STP Cable, EIA/TIA 568 Wiring, RJ45 Connectors.

Physical Properties:

	Height	Width	Depth	Weight
Local Unit	2.7 cm	18.0 cm	8.3 cm	0.4 kg
Remote Unit	2.7 cm	18.0 cm	8.3 cm	0.4 kg

Operation and Storage parameters:

Operating Temperature:	0~40° C (32 to 104° F)
Humidity:	0~80% RH non-condensing
Storage Temperature:	-20~60° C (-4 to 140° F)

Compatibility:

- Computer PC equipped with USB ports, Apple & SUN computers with USB ports.
- USB USB 1.1 Compliant devices.

© Copyright 2004 - 2009. All rights reserved.

Daxten, the Daxten logo, Voyager and The Brains Behind KVM Switching and Sharing are trademarks of Daxten Industries. All other trademarks acknowledged.

Revision 1.0



Voyager 100 USB

Introduction

Thank you for purchasing the Voyager 100 USB UTP Extender. This product will allow you to place your Monitor and USB devices up to 100 meters away from your computer.

Product Features

- Allows a user to control a PC from up to 100 meters (330 feet) away, using a single CAT5, 5e or CAT 6 cable.
- No additional software is required for operation.
- Adjustable Video Equalisation - Compensates for loss of image quality due to cable length in several steps with or without extra gain.
- Fully buffered signals to ensure consistent remote operation of your PC
- Dual Access allows for an additional Monitor to be connected through the local unit.

Operation



The Voyager is simple to install, with no software is required. Just connect the units up as described in quick setup system guide and you're ready to work. Switch the computer off before wiring up the units.

Hardware Installation

Before connecting your computer to the Voyager Local unit, please ensure that it is powered off. Connect your console devices to the Voyager remote unit. Note: the Voyager Remote requires power.

The Voyager 100 USB is compatible with almost all standard PC's, SUN and Apple computers with USB ports

The local unit is normally powered from the computer through the USB connector. Some computers may not supply sufficient power through the USB port connector; this necessitates the use of a 5VDC mains adapter on the local unit. The Voyager 100 USB Local Unit is equipped with a DC jack for the use of an optional power supply. This jack is normally not used, since most computers supply enough power through the USB port, if not please use a separate power supply (9014-00A) for the local unit.

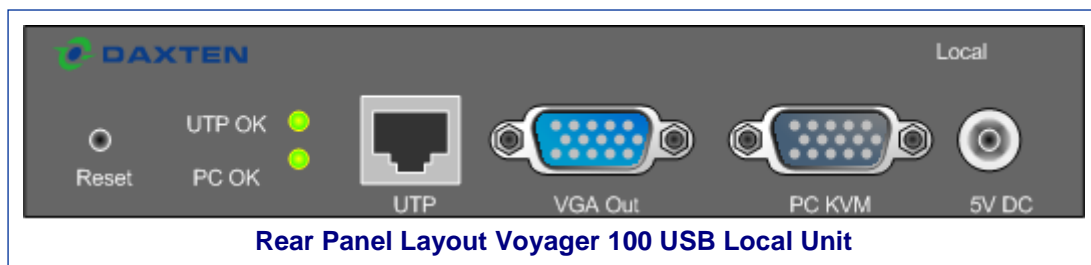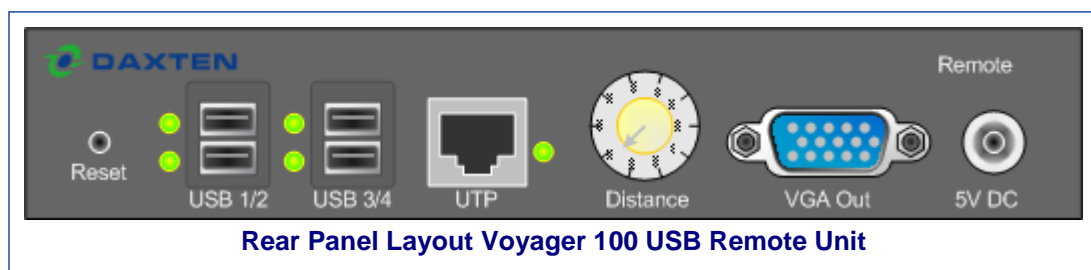

Cable Requirements

Cables to connect the Voyager Local unit to your PC's system unit are supplied in the package. Your Monitor and USB devices will plug straight in to the Voyager Remote Unit. The Voyager 100 USB is a dual access unit, in that it allows for an access point (monitor) next to your computer as well as access point up to 100m away.

The UTP / STP interconnect cable to connect the Voyager Local Unit to the Voyager Remote Unit is not supplied with the Voyager units. If you do not have suitable CAT 5, 5E or 6 UTP or STP cable fitted at you site, please consult your dealer.

The Local and Remote Units are connected by industry standard structured cabling (Category 5, 5E or 6 UTP/STP, 4-pair) terminated with RJ45 connectors.

The cable used should be solid trunk cable. Stranded patch cable will give poor results over longer distances.

The connector wiring must meet the EIA/TIA 568 standard.

CAT5 Wiring Scheme

The Local-Remote interconnection cable is terminated in RJ45 connectors and should be wired according to the EIA/TIA 568 (Scheme B preferred) industry standard. The Voyager will function with other wiring schemes, but the video quality may be impaired.

Orientation: Looking into the RJ45 socket pin 1 is on the left and pin 8 on the right.

Pin	Wire Colour	Wire	Pair
1	White/Orange	T2	2
2	Orange/White	R2	2
3	White/Green	T3	3
4	Blue/White	R1	1
5	White/Blue	T1	1
6	Green/White	R3	3
7	White/Brown	T4	4
8	Brown/White	R4	4




The Voyager has been tested with all major makes of CAT 5 cable including BICC-VERO, Mohawk, and Brand-Rex. The Voyager has also been tested with most major makes of CAT 5E and CAT6 with good results.

Note: That failure to wire the twisted pairs correctly will impair the video quality dramatically and / or prevent correct operation.

This Voyager 100 USB extender is designed for use up to a maximum cable length of 100m/330ft. At this length the video quality should still be acceptable even at a screen resolution of 1280 x 1024 (85 Hz).

Although a single continuous length of interconnect cable is preferable, operation is possible through multiple Patch Panels. However, the more patch panels the cable is routed through, the greater the chance of video signal degradation.

Quick Setup System Guide

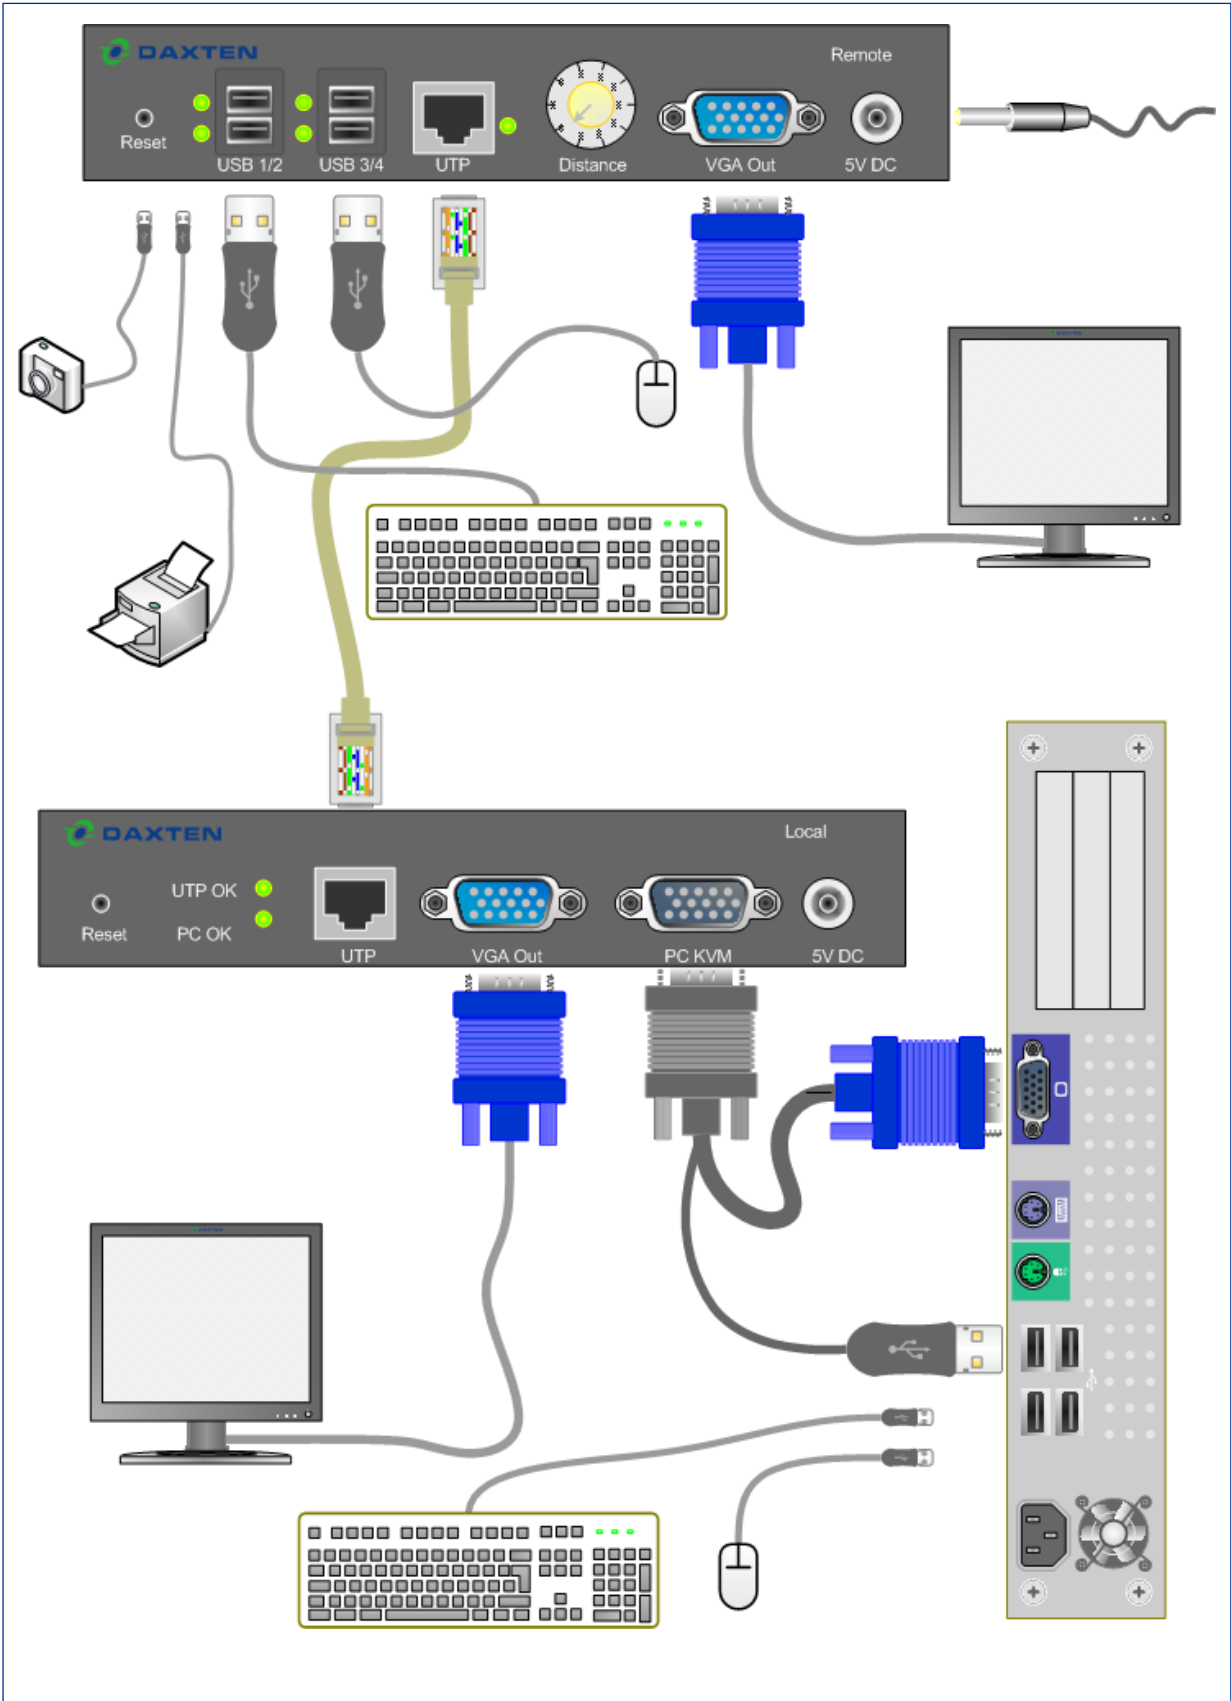

Connecting Up

1. Switch off your computer.
2. Connect the Voyager Local Unit to the PC KVM Cable
3. Connect the PC KVM cable to your computer's monitor and USB ports
4. Plug in your Monitor into the corresponding Monitor port on the Voyager Local Unit. (You can use the Voyager without having a Monitor connected).
5. Connect your UTP cable to the Voyager Local Unit.
6. Connect the other end of your UTP cable to the Voyager Remote Unit.
7. Connect the power supply unit to the Voyager Remote unit.
8. Plug in your Monitor and USB devices to the corresponding Monitor and USB ports on the Voyager Remote Unit.
9. Power on your computer.
10. Check that your USB devices operate correctly.
11. Adjust the Video Equalisation if required on the Voyager Remote Unit which contains video equalisation circuitry that will compensate for the loss in image quality experienced when sending video over long cables.

Note USB 2.0 and USB 1.1 are supported, but will only operate at USB 1.1 speed.

To set the correct level of equalisation there is an adjustment wheel on the rear side of the Voyager Remote Unit. Select and adjust the range appropriate to the cable length (these only need to be set once.)

Switch Position	Cable Length	
0	0 – 30 m	0 – 100 ft
1	30 – 50 m	100 – 150 ft
2	50 – 70 m	150 – 230 ft
3	70 – 100 m	230 – 330 ft
4 - 9	70 – 100 m	230 – 330 ft

The remote unit (when installed in its final location) may be left permanently powered up.

Please note that for all practical purposes cable equalisation cannot be exact - the remote image will never be as sharp as the original. The Voyager's equalisation system is designed so that it produces very good results on short to medium length cables and an acceptable quality over longer cables.

Note: If you are at the top end of a cable length range, say 45m, you may achieve a better quality video compensation by selecting the next cable length range, e.g. setting the switch to position 2 instead of position 1.

Service Information

Technical Support

If you cannot determine the nature of a problem, please call Daxten and ask for Technical Support. If possible, call from a phone located near the unit, as we may be able to solve your problem directly over the phone. If we cannot solve your problem, and determine that the fault is in the unit, we will issue a Return Material Authorisation (RMA) number that must appear on the outside of all returned products. The unit should be double-packed in the original container, insured, and shipped to the address given to you by our Technical Support representative. The Technical Support offices are found on the back of this manual.

Limited Warranty

Daxten warrants to the end user that this product is and will be free from defects in materials and workmanship for a period of 24 months from the date of purchase. If during the warranty period the product should fail, the purchaser must promptly call Daxten for a RETURN MATERIALS AUTHORIZATION (RMA) number. Make sure that the RMA number appears on the packing slip, proof of purchase, AND ON THE OUTSIDE OF EACH SHIPPING CARTON. Unauthorized returns or collect shipments will be refused.

Ship prepaid to the Daxten office (see back page) where you purchased your product. The above limited warranty is voided by occurrence of any of the following events, upon which the product is provided as is, with all faults, and with all disclaimers of warranty identified below:

1. If non-Daxten approved power supply or cabling is attached to the product.
2. If defect or malfunction was caused by abuse, mishandling, unauthorized repair, or use other than intended.
3. If unauthorized modifications were made to product.
4. If unreported damages occurred in any shipment of the product.
5. If damages were due to or caused by equipment or software not provided by Daxten.
6. If the product is used with non-grounded or incorrectly polarized AC power.
7. If the product is used in contradiction to any instruction provided by any User Guide or Instruction Sheet provided to you or with the product.

EXCEPT AS SPECIFICALLY PROVIDED ABOVE AND TO THE MAXIMUM EXTENT ALLOWED BY LAW, DAXTEN DISCLAIMS ALL WARRANTIES AND CONDITIONS WHETHER EXPRESS, IMPLIED, OR STATUTORY AS TO ANY MATTER WHATSOEVER INCLUDING, WITHOUT LIMITATION, TITLE, NON-INFRINGEMENT, CONDITION, MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR OR INTENDED PURPOSE.

EXCEPT AS EXPRESSLY PROVIDED ABOVE AND TO THE MAXIMUM EXTENT ALLOWED BY LAW, DAXTEN SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES (INCLUDING WITHOUT LIMITATION, LOSS OF PROFIT, LOSS OF BUSINESS, LOSS OF INFORMATION, FINANCIAL LOSS, PERSONAL INJURY, LOSS OF PRIVACY OR NEGLIGENCE) WHICH MAY BE CAUSED BY OR RELATED TO, DIRECTLY OR INDIRECTLY, THE USE OF A PRODUCT OR SERVICE, THE INABILITY TO USE A PRODUCT OR SERVICE, INADEQUACY OF A PRODUCT OR SERVICE FOR ANY PURPOSE OR USE THEREOF OR BY ANY DEFECT OR DEFICIENCY THEREIN EVEN IF DAXTEN OR AN AUTHORIZED DAXTEN DEALER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSSES.

Waste Electrical and Electronic Equipment (WEEE)



Within the European this symbol indicates that this product should not be disposed in household waste. It should be deposited at an appropriate facility to enable recovery and recycling. For information on how to recycle this product, please check with the reseller of the product that replaces this product "Take Back" or the original seller of this product.





DAXTEN®

THE BRAINS BEHIND
KVM SWITCHING & SHARING

www.daxten.com

Ireland

Bay 21
Free Zone West
Shannon, Co. Clare
info.ie@daxten.com
www.daxten.ie
Tel: +353 (0) 61 23 4000
Fax: +353 (0) 61 23 4099

USA

info.us@daxten.com
www.daxten.us

United Kingdom

5 Manhattan Business Park
Westgate
London W5 1UP
info.uk@daxten.com
www.daxten.co.uk
Tel: +44 (0) 20 8991 6200
Fax: +44 (0) 20 8991 6299

Österreich

Künstlergasse 11/4
A-1150 Wien
info.at@daxten.com
www.daxten.at
Tel: +43 (0)1 879 77 65
Fax: +43 (0)1 879 77 65 30

Deutschland

Salzufer 16, Geb. B
10587 Berlin
info.de@daxten.com
www.daxten.de
Tel: +49 (0) 30 8595 37-0
Fax: +49 (0) 30 8595 37-99

Schweiz

Seebahnstr. 231
8004 Zürich
info.ch@daxten.com
www.daxten.ch
Tel: +41 (0) 43 243 32 11
Fax: +41 (0) 43 243 32 16

España

C/Florian Rey, 8
50002 Zaragoza
info.es@daxten.com
www.daxten.com.es
Tel: +34 902 197 662
Fax: +34 976 201 633

Sweden

info.se@daxten.com
www.daxten.se

Denmark

info.dk@daxten.com
www.daxten.dk

France

B.P 04 - 77
Route de Cheptainville
91630 Marolles-en-Hurepoix
info.fr@daxten.com
www.daxten.fr
Tel: +33 (0)1 64 56 09 33
Fax: +33 (0)1 69 14 88 34